

A.40005/003 Special puller and arms for removing differential bearing inner race




A.45028 Knurled spacer for extraction of differential bearing inner race




A.55035 Spin wrench for removing bell housing to engine bolts




A.55087 Ring spanner for oil level and drain plug of final drive unit

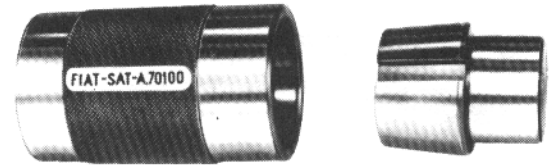


A.70100 Tool for installing circlip in 5th gear synchromesh unit

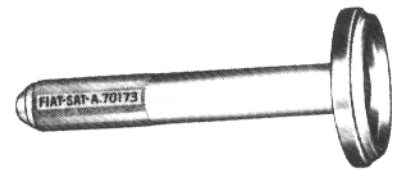


A.70173 Tool for fitting differential bearing outer race

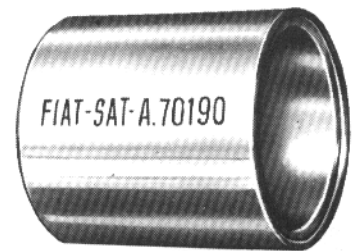


A.70190 Tool for fitting differential bearing inner race

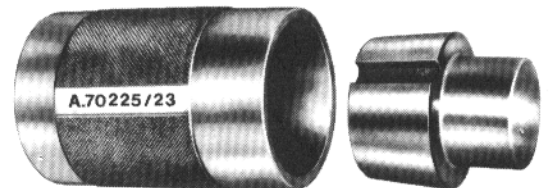

 
A.70225/23 Tool for installing circlip on 3rd and 4th gear synchromesh units



A.70296 Tool for fitting gear selector rod oil seal.

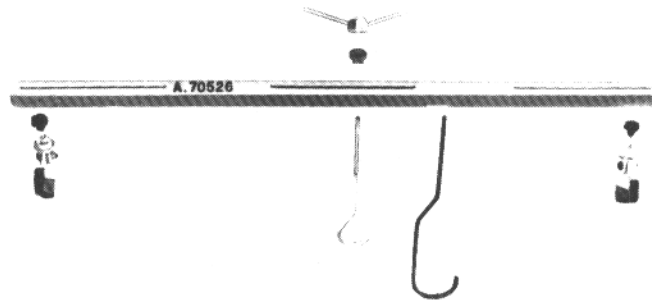


A.70526 Engine support cross rail

 


A.70301 Pilot for fitting gear selector rod oil seal



A.70575 Support used in conjunction with hydraulic jack when removing or replacing transmission unit

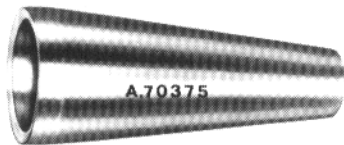


A.70375 Pilot for fitting seal and bushing on CV joint rubber protectors

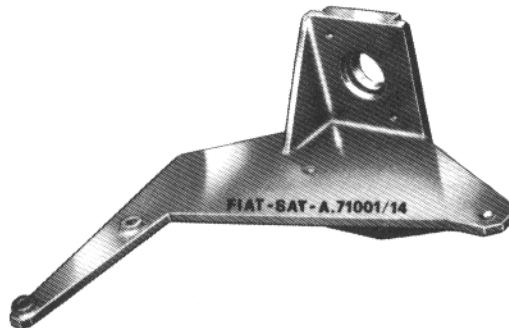


A.71001/4 Transmission support for rotating stand Ar.22204



A.70379 Tool for fitting oil seal on transmission front cover

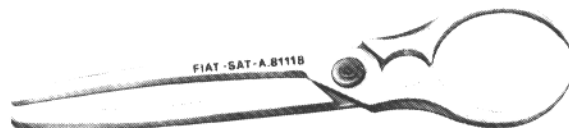

A.81118 Pliers for fitting CV joint protector boot retaining clamps

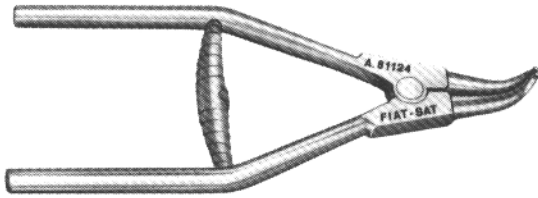


A.81124 Pliers for CV joint circlips



A.86016 Drift (16 mm) for fitting internal selector rod plugs



A.86014 Drift (14 mm) for fitting internal selector rod plugs

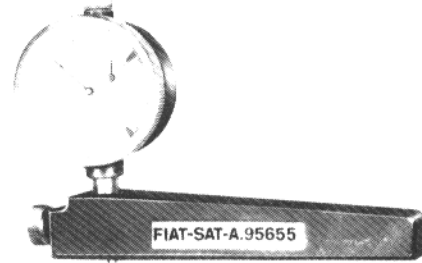

A.95655 Tool for determining thickness of differential bearing adjusting shims