




4467 Exhaust gas analyzer adapter for fuel-injected vehicles

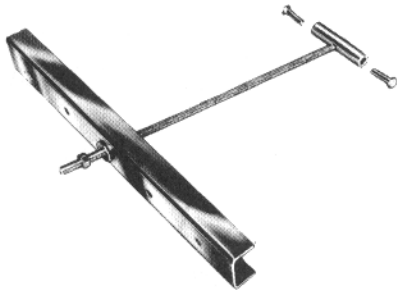


4852 A/C belt tension tool

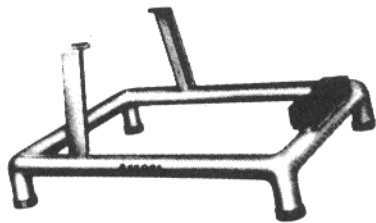


A.10061 Engine stand

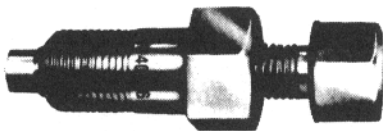

A.40026 Extractor for water pump impeller

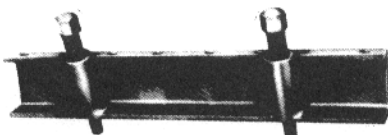


A.40052 Cylinder head extractor

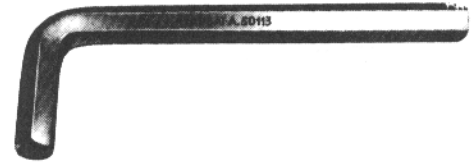


A.50113 Oil sump drain plug spanner




A.50121 Crankshaft pulley nut spanner

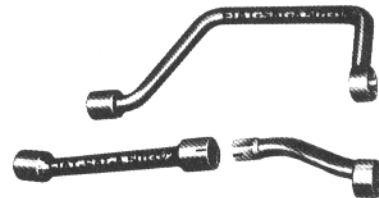

 
A.50131 Adapters for tightening 19 mm hex cylinder head nuts, intake side




A.50132 Adapter for tightening camshaft box bolts

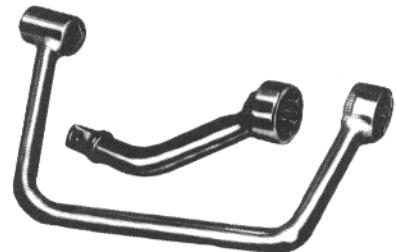

A.50172 Adapters for tightening 17 mm hex cylinder head bolts, intake side

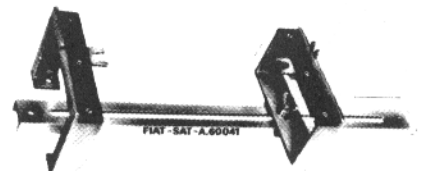


A.60041 Cylinder head support

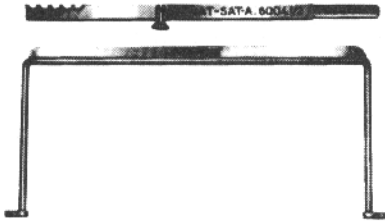


A.60041/2 Valve leak test tools




A.60054 Drift for removing and inserting small-end bushing

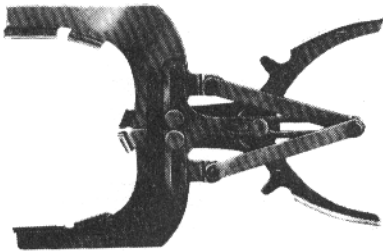

A.60183 Expanding tool for piston rings

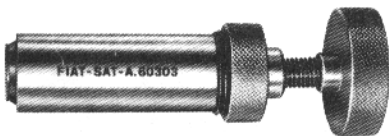

A.60303 Tool for inserting gudgeon pin circlips

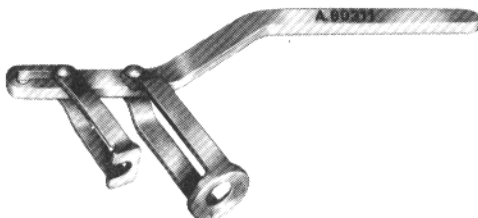

A.60311 Valve spring compressor




A.60311 Oil filter remover




A.60313 Drift for inserting valve guide seals



A.60326 Drift for removing oil pump distributor drive gear bushing

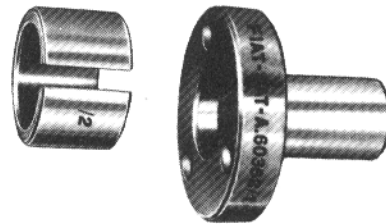


A.60368 Flange and bushing for positioning crankshaft on grinder

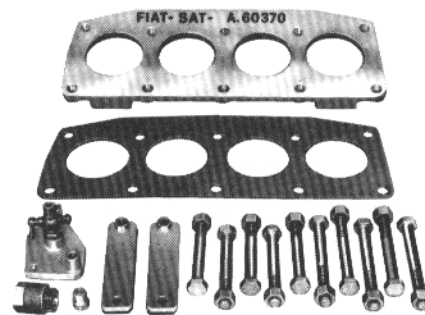

A.60370 Tool kit for testing cylinder head for leaks



A.60372 Drift for removing and fitting auxiliary shaft bushing

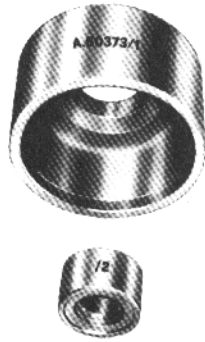

A.60373 Tool for removing and fitting water pump pulley and positioning impeller




A.60459 Engine cranking tool



A.60462 Drift for fitting valve guides




A.60395 Drift for removing valve guides

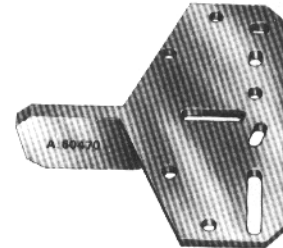

A.60470 Cylinder head support bracket




A.60421 Tappet pressure lever

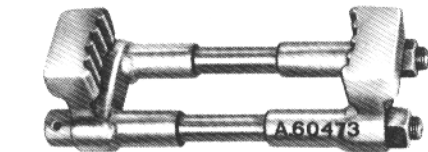


A.60473 Camshaft sprocket lock



 
A.60442 Cylinder head base plate



A.60498 Auxiliary shaft sprocket lock

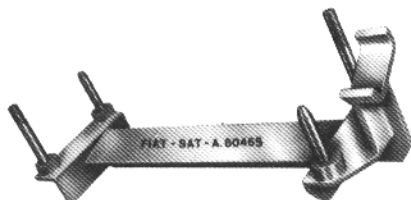


A.60455 Cylinder head support for removing tappet shims

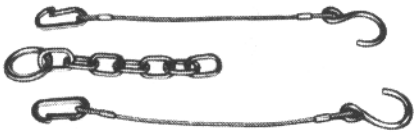


A.60592 Lifting tackle for removing and refitting engine




A.601001/231 Engine mounting bracket, flywheel side, for rotating engine stand

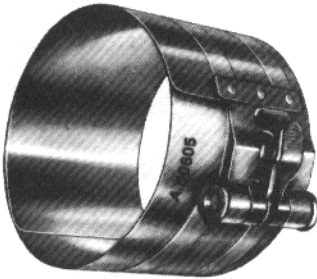

A.60605 Universal piston ring compressor

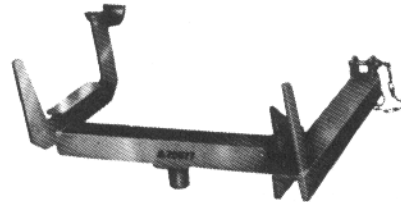

A.70577 Support for removing and refitting power unit - Use with hydraulic jack

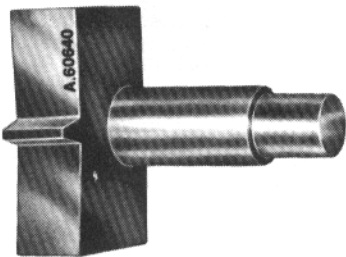

A.60640 Flywheel lock



A.76036 Jumper cables with starter motor attachment terminals for rotating engine during tappet adjustment



A.86010 Drive (10 mm) for fitting crankshaft welch plugs



A.61001/27 Engine mounting bracket, valve gear slide, for rotating engine stand



A.87001 Special pliers for removing tappet shims




A.90308 Expanding reamer (22 mm) for small-end bushings




A.94016/10 Seat cutter (10 mm) for crankshaft plugs (use with A.94016)




A.90310 Finishing reamer (8 mm) for valve guide bores

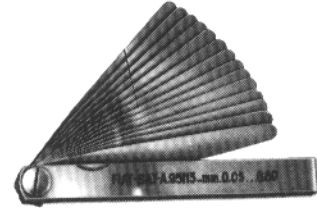

A.95113 Feeler gages for checking tappet clearance

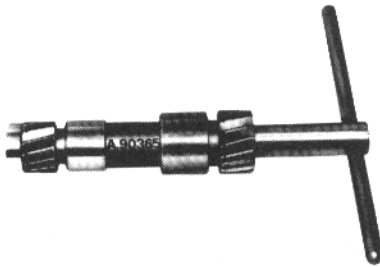


A.90365 Auxiliary shaft bushing reamer

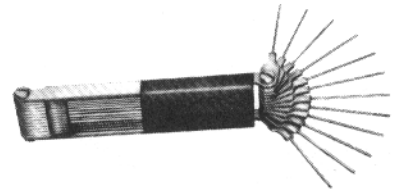


A.95124 Set of calibrated wires for adjusting throttle valve




A.94016 Mandril for operating reamer

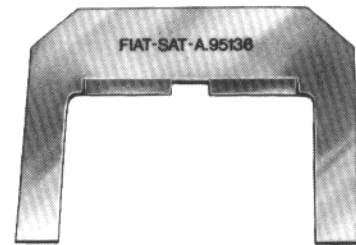


A.95136 Gage for checking float level

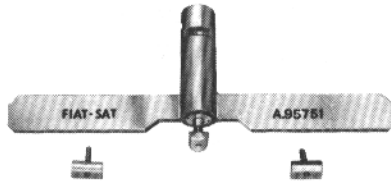


A.95751 Tool for checking toothed timing belt tension

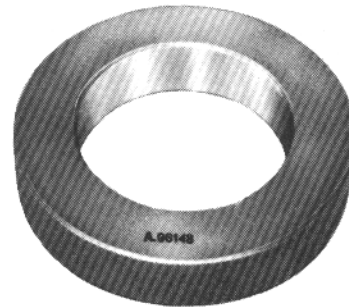


A.96148 Standard bore gage (86 mm)

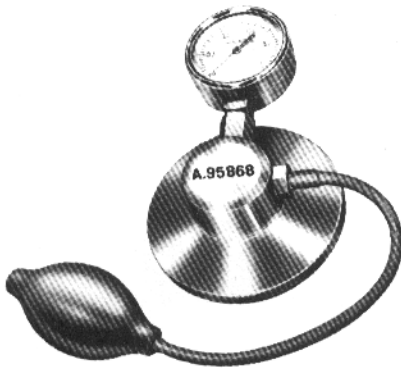

A.95868 Valve seat tester

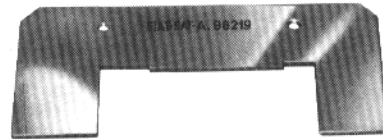

A.96219 Gage for checking valve stem height

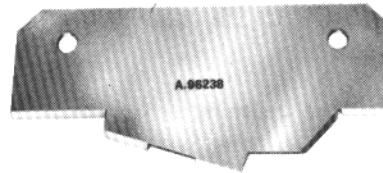

A.96238 Combustion chamber depth gage