



# Starter, Alternator, Ignition, Engine Cooling Fan, Carburetor Cooling Fan, Idle Stop Solenoid, and Power Distribution Circuits

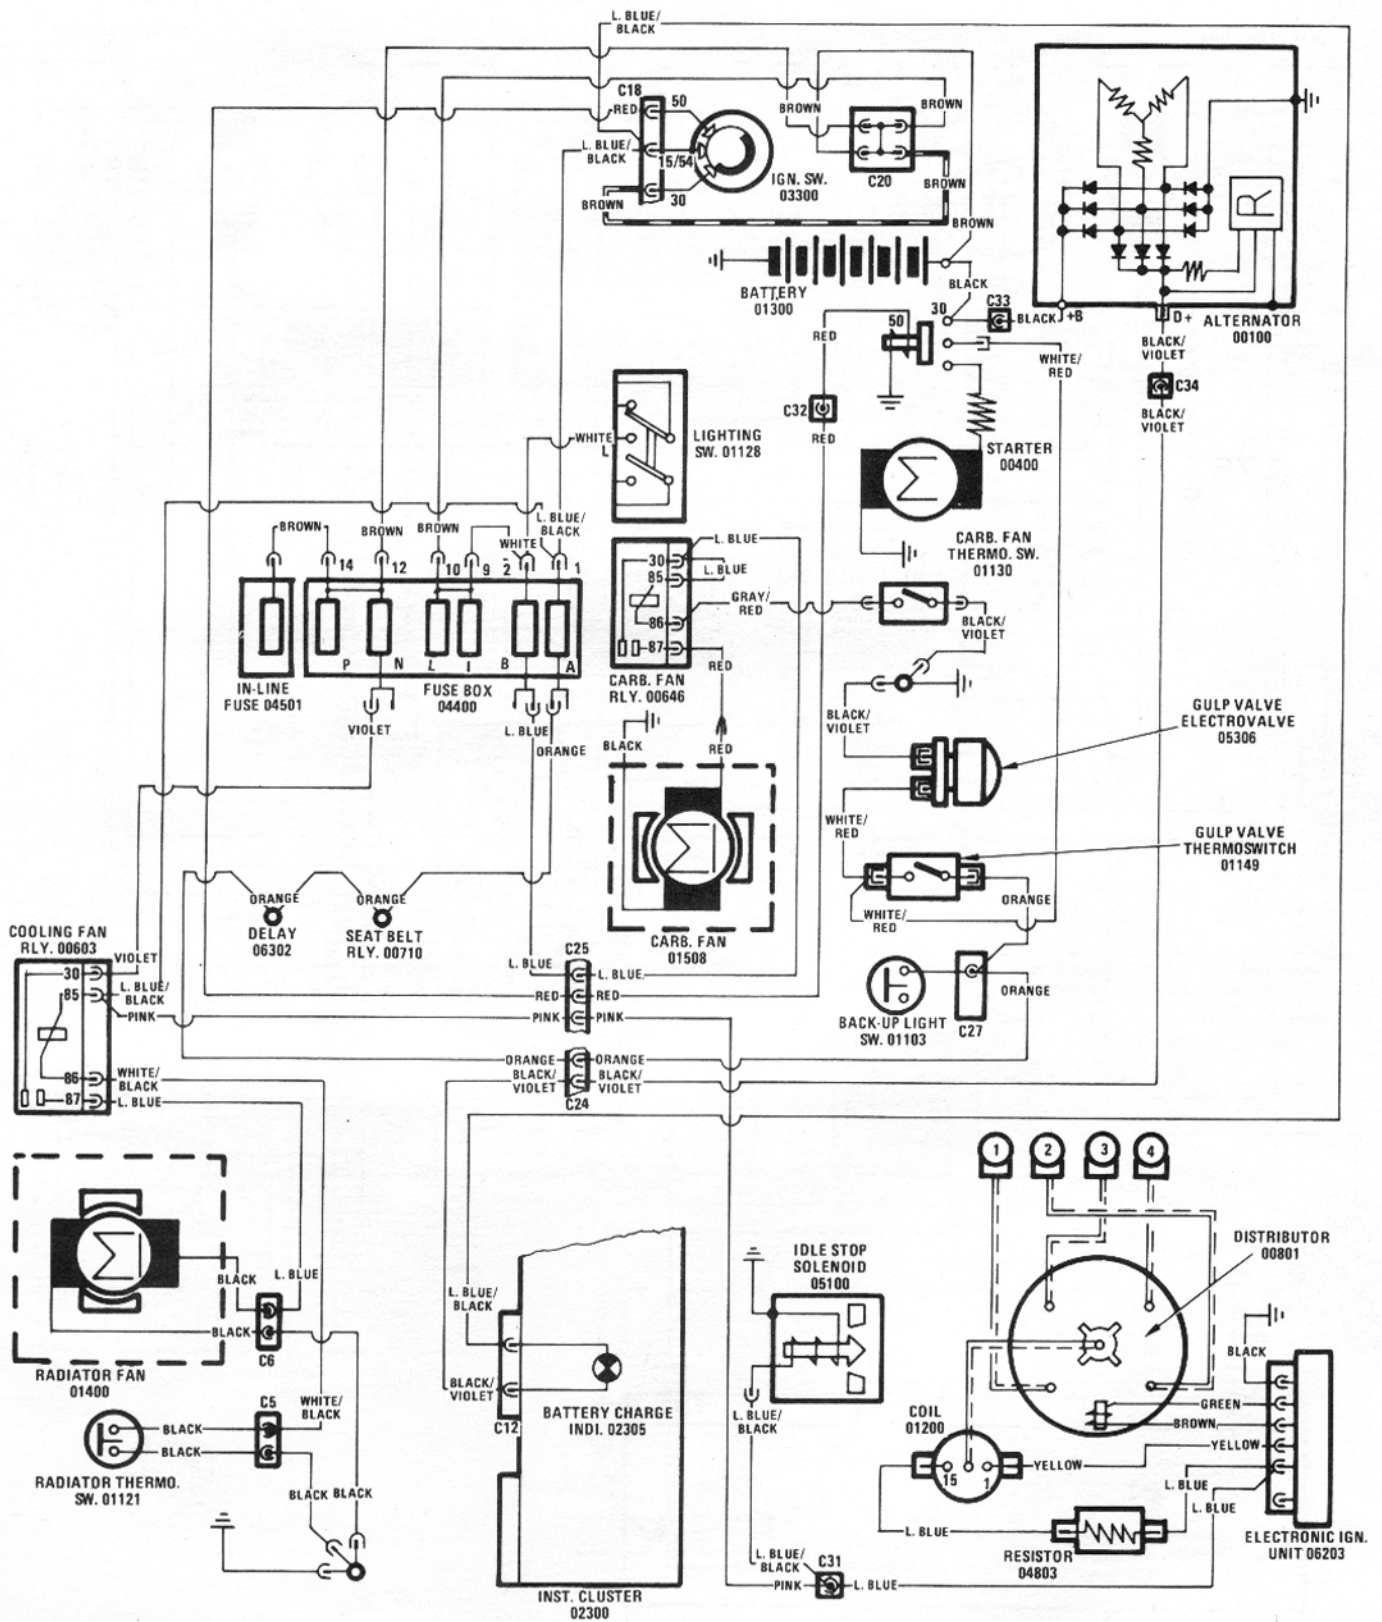


# High and Low Beams Circuits

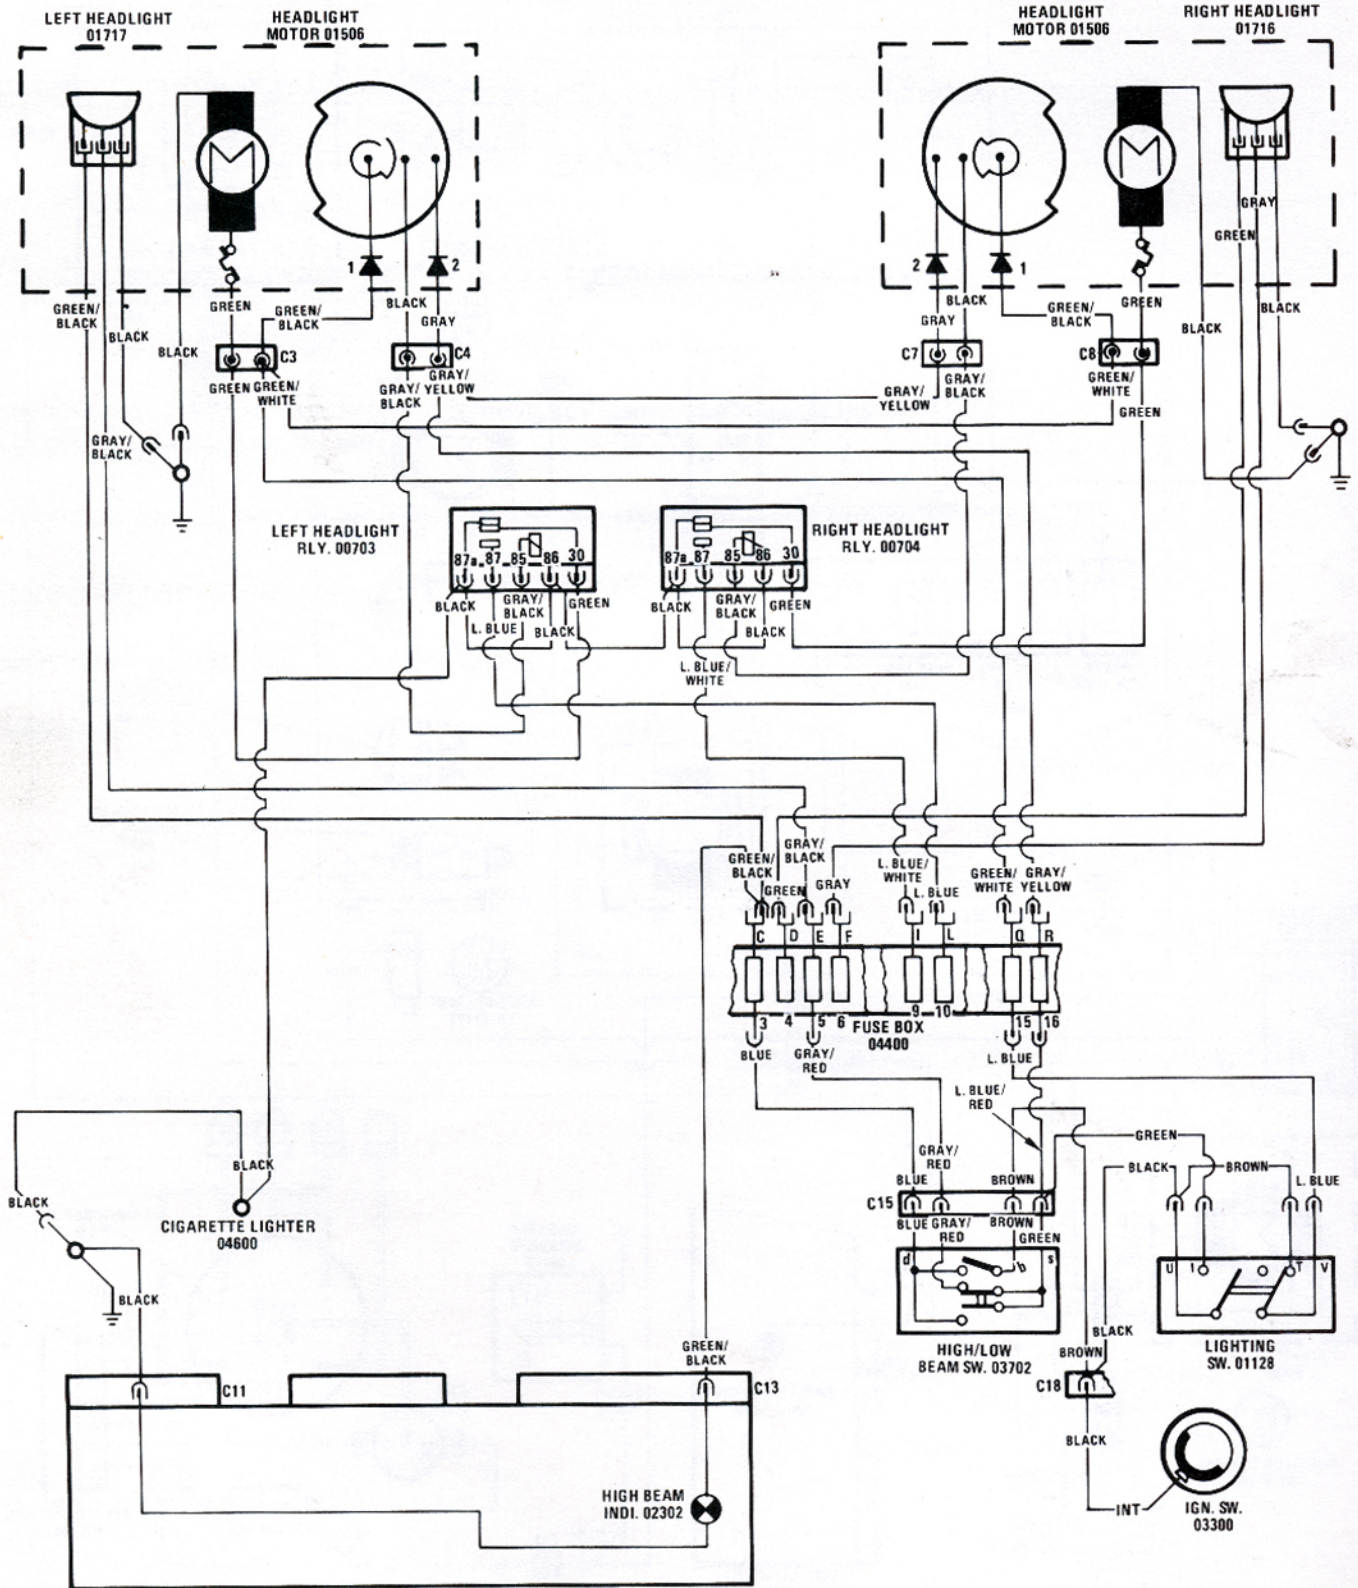




# Parking, License Plate, Side Marker Lights, and Interior Lights Circuits

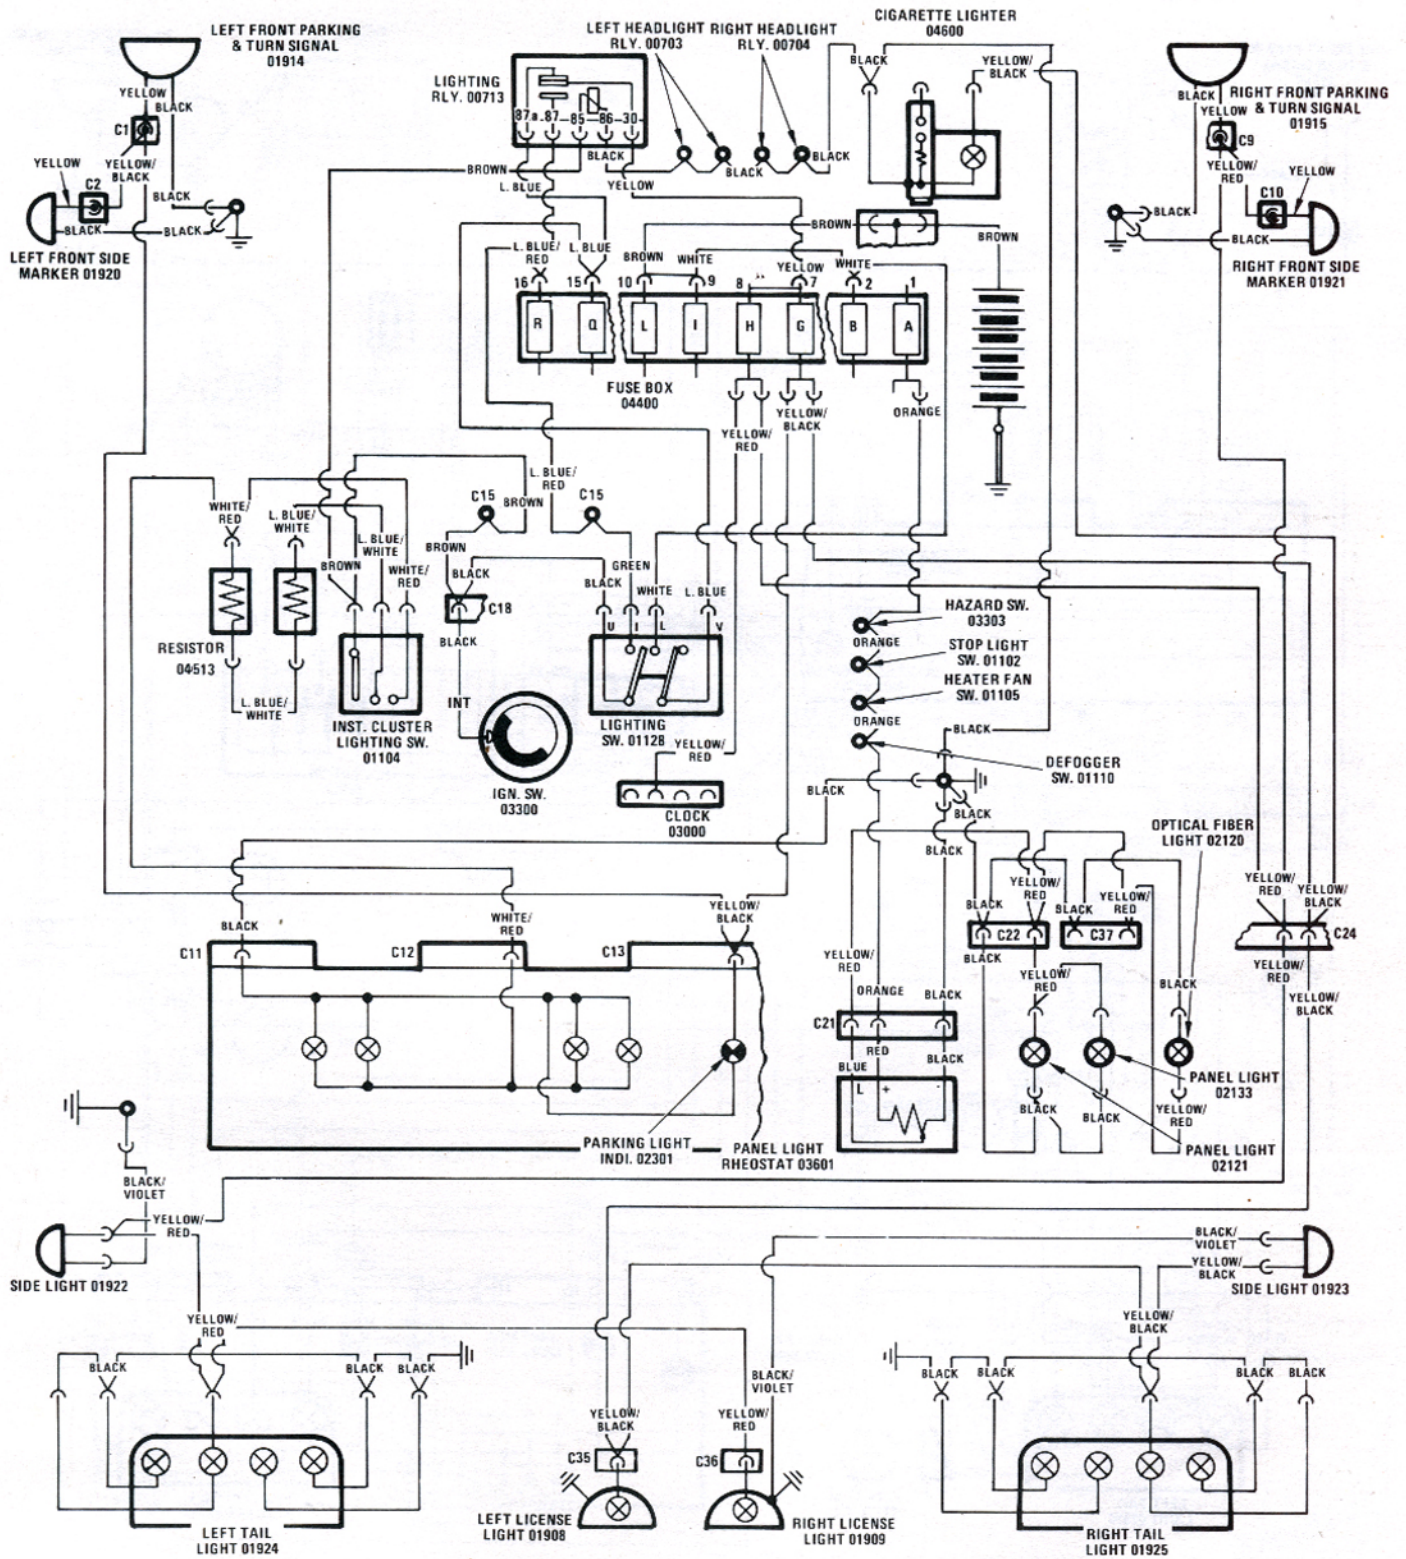


# Turn Signals, Hazard Lights, Back-Up Lights, and Stop Lights

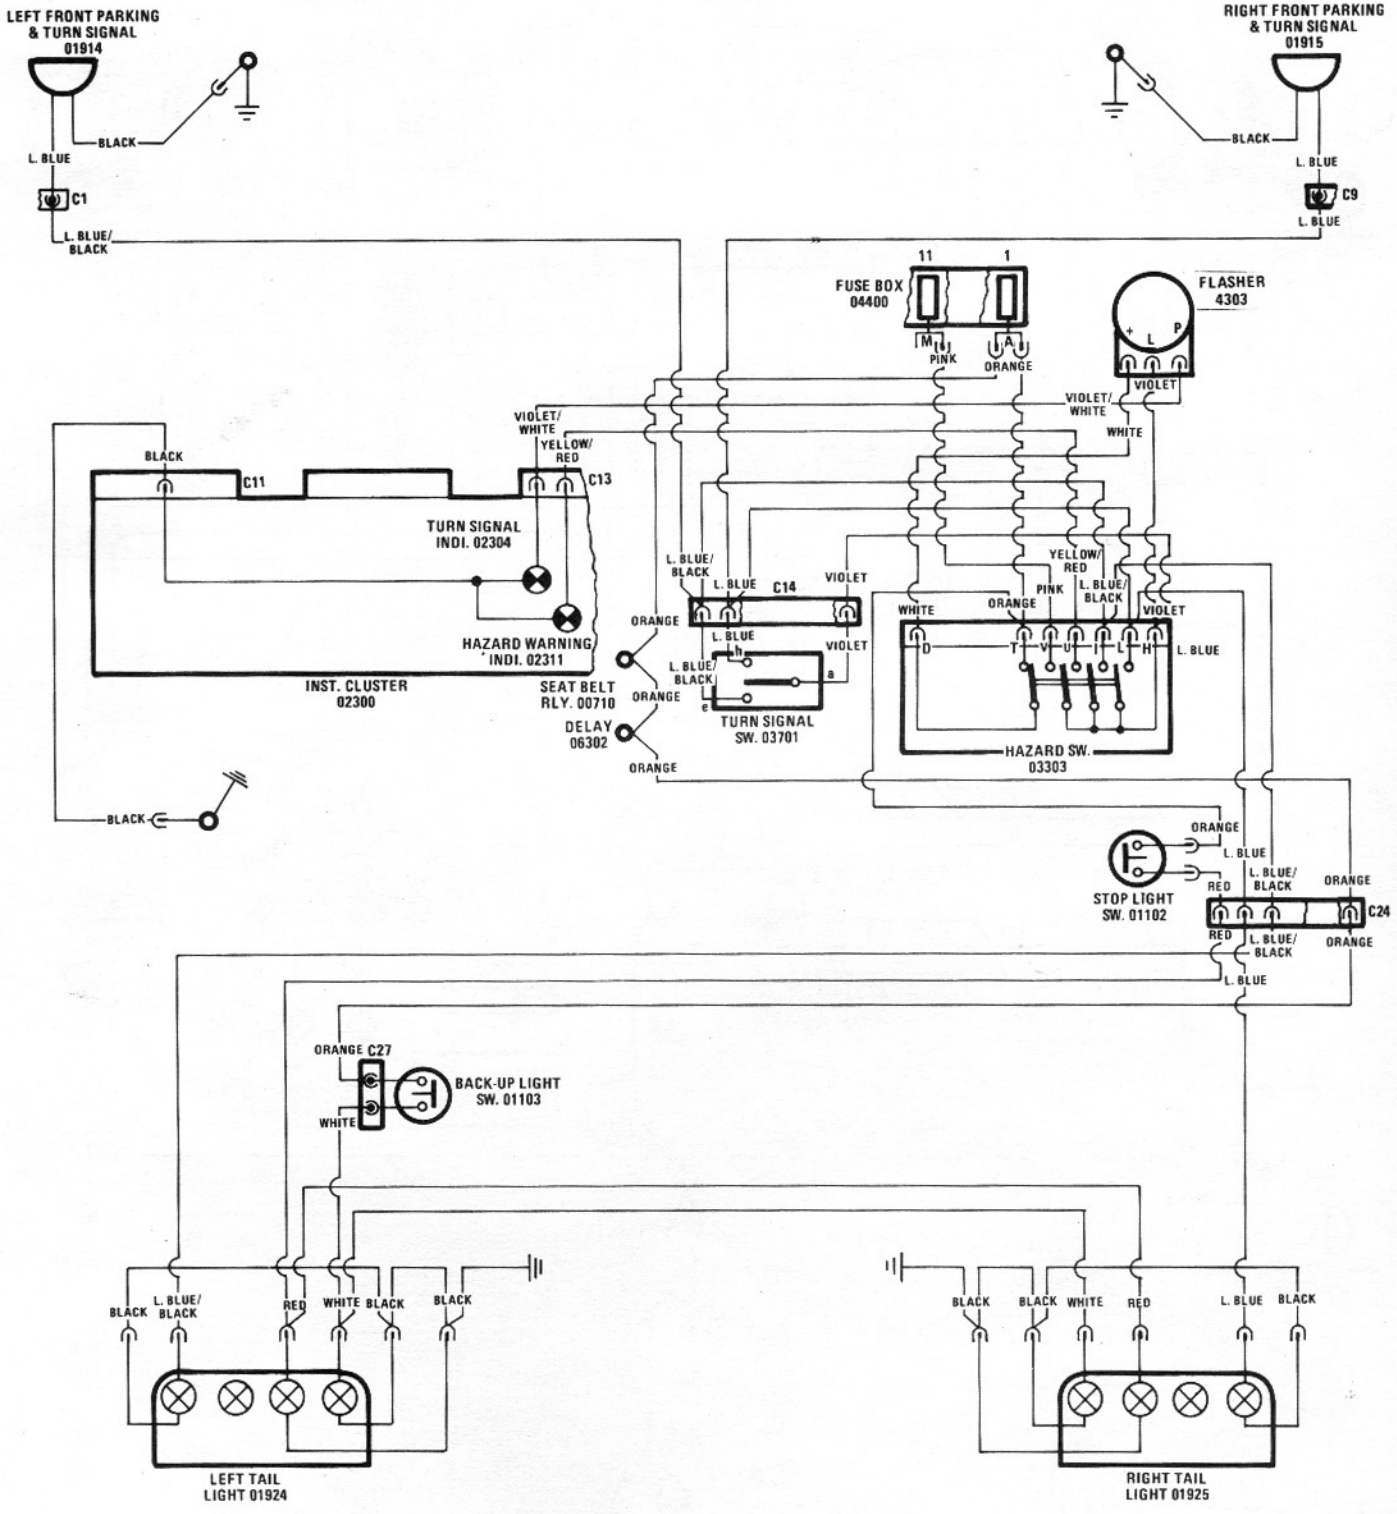




# Instruments, Indicators, Seat Belt and Remove Key Warning, Cigarette Lighter, and Courtesy Light

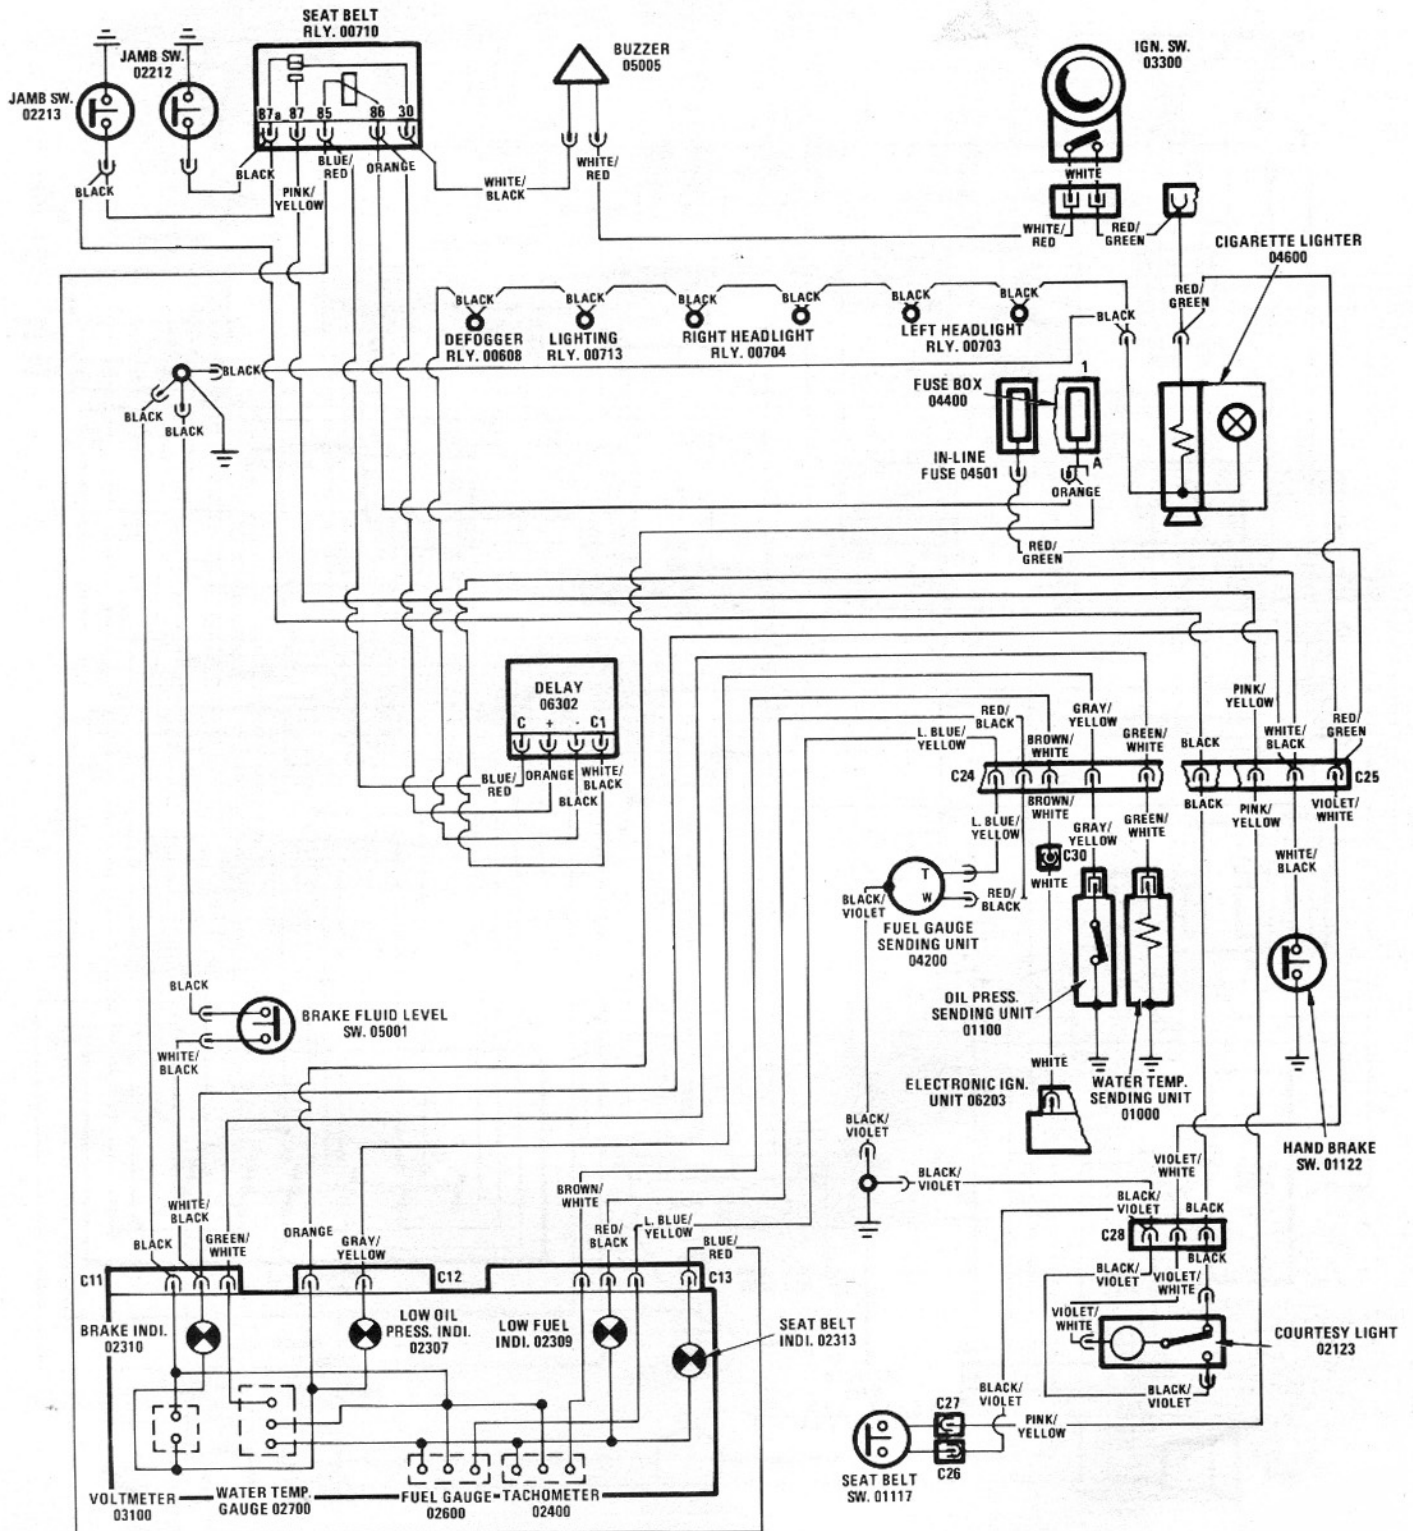


# Heater Fan, Windshield Washer/Wiper, Rear Window Defogger, Horn, and Radio Circuits

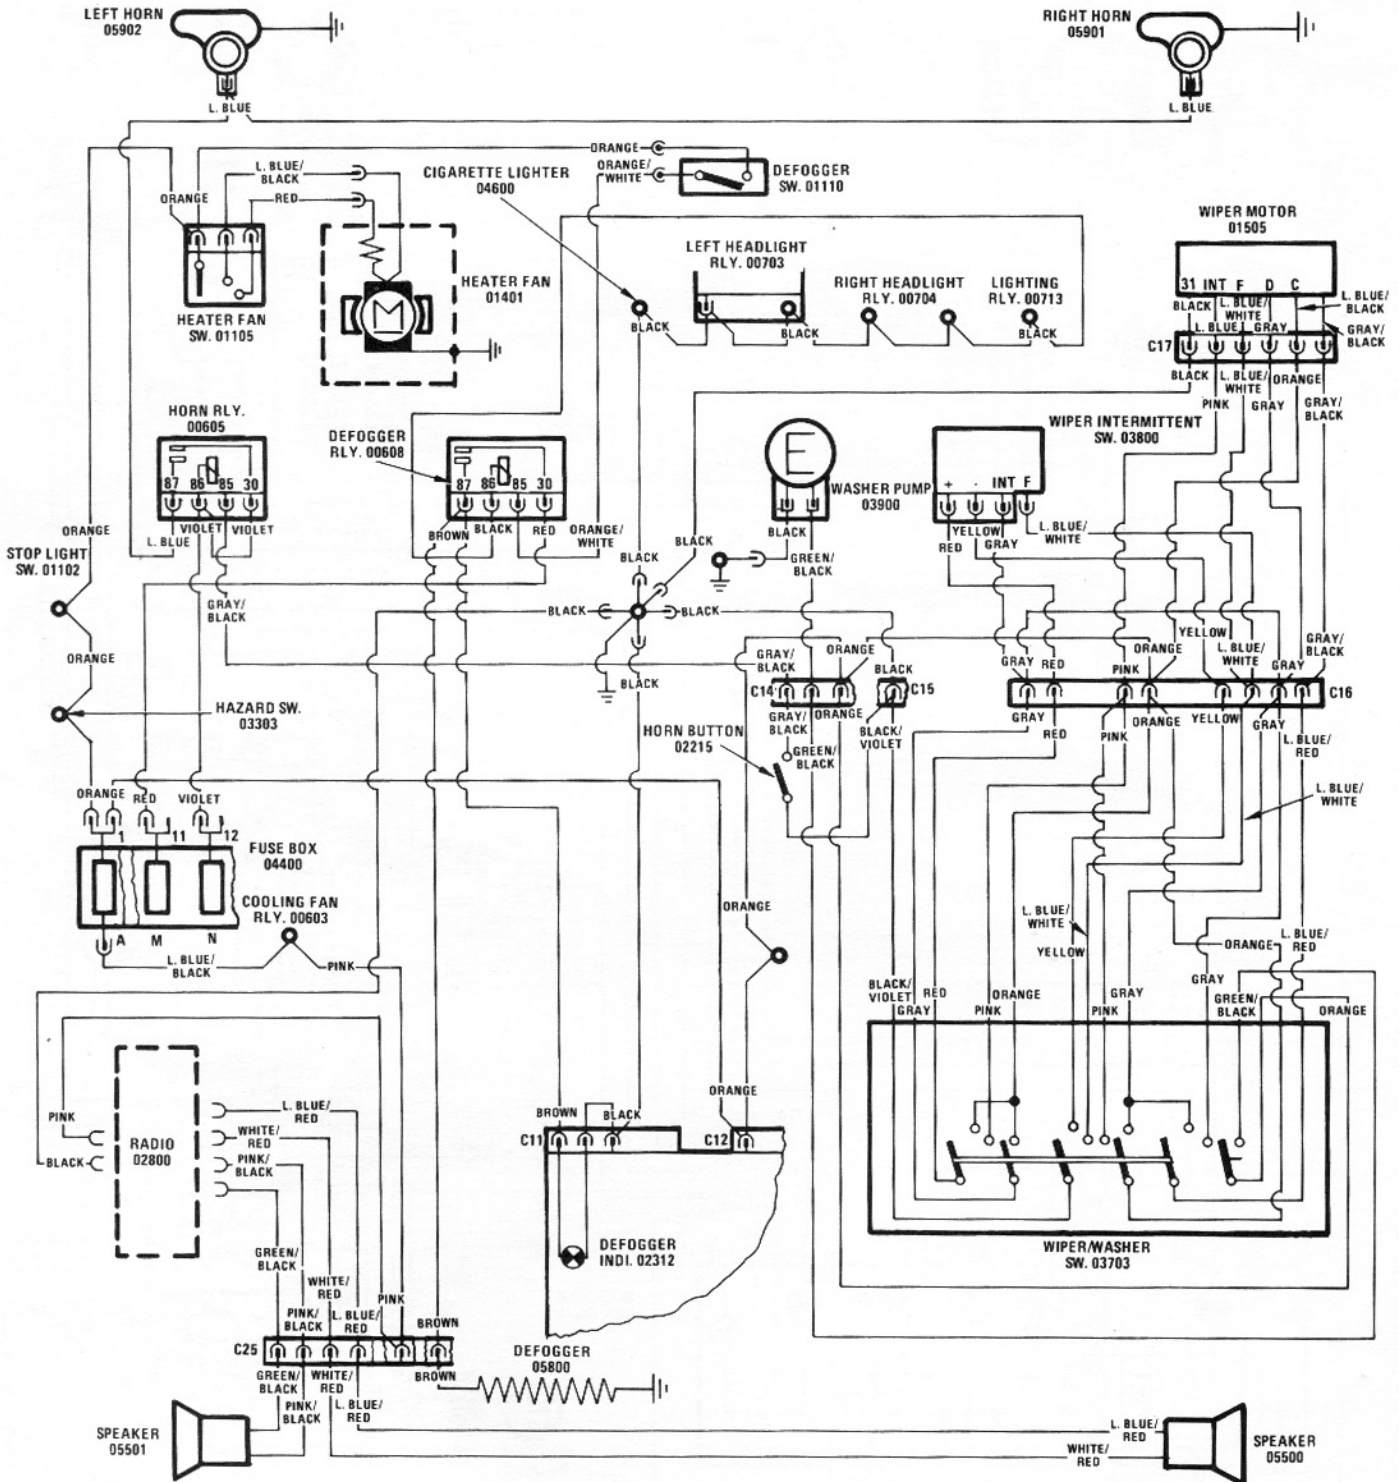




# Air Conditioning Circuit

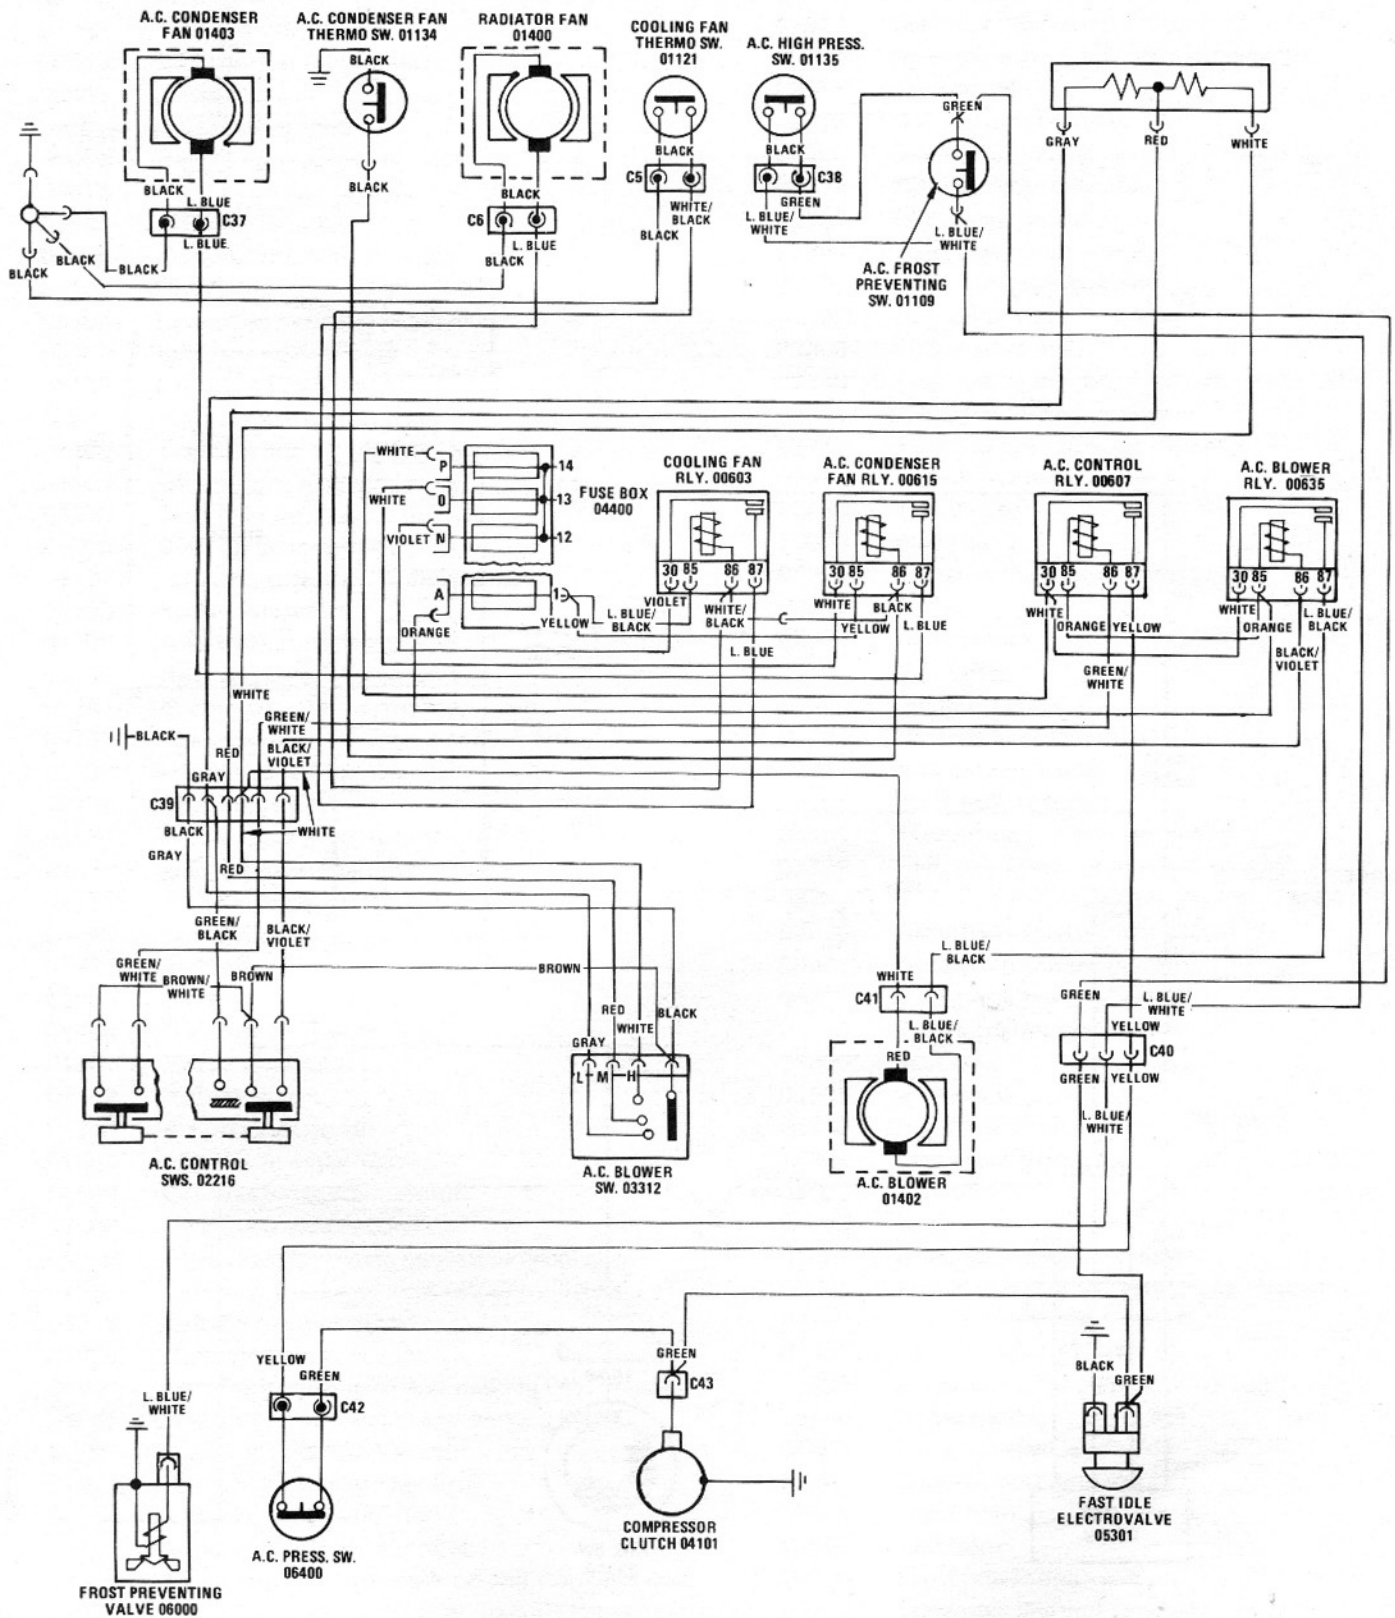

# Digital Clock Circuit

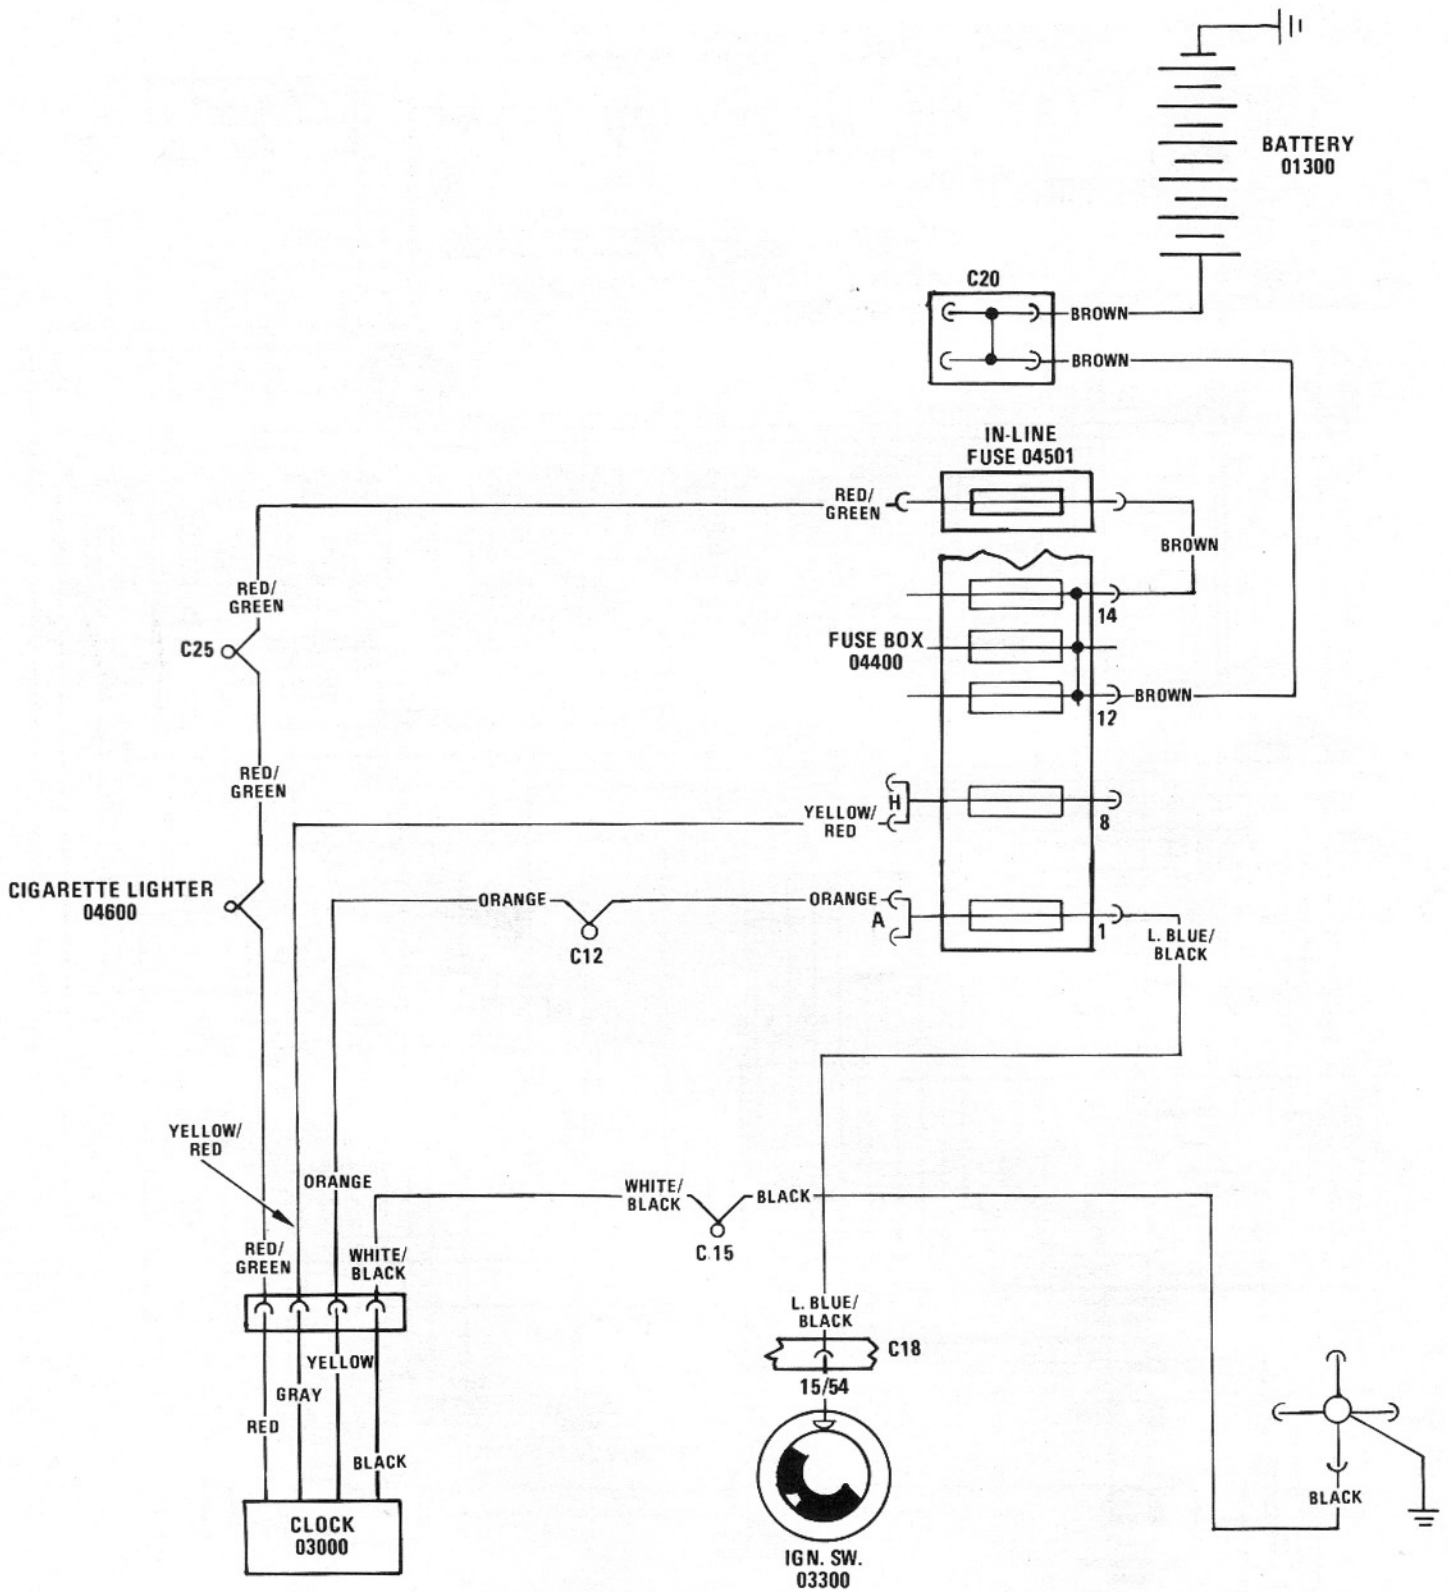



# Component Index

00100	Alternator	02133	Panel light
00400	Starter motor	02212	Courtesy light — right door jamb switch
00603	Radiator fan motor relay	02213	Courtesy light — left door jamb switch
00605	Horns relay	02215	Horn button
00607	A.C. control relay	02216	A.C. control switches
00608	Rear window defogger relay	02300	Instrument cluster
00615	A.C. condenser fan realy	02301	Parking lights indicator
00635	A.C. blower relay	02302	High beam indicator
00646	Carburetor fan motor relay	02304	Turn signal indicator
00703	Concealed left headlight relay	02305	Battery charge indicator
00704	Concealed right headlight relay	02307	Low oil pressure indicator
00710	Seat belt buzzer relay	02309	Fuel reserve indicator
00713	Parking lights relay	02310	Fuel reserve indicator and handbrake "ON"
00801	Ignition distributor	02311	Hazard warning indicator
01000	Engine water temperature sending unit	02312	Rear window defogger indicator
01100	Oil pressure sending unit	02313	Fasten seat belts indicator
01102	Stop light switch	02400	Tachometer
01103	Back-up light switch	02600	Fuel gauge
01104	Instrument cluster lighting switch	02700	Engine water temperature gauge
01105	Heater fan switch	02800	Radio
01109	A.C. frost preventing switch	03000	Digital clock
01110	Rear window defogger switch	03100	Voltmeter
01117	Button switch on driver's seat belt	03300	Ignition switch
01121	Thermoswitch for engine cooling fan	03303	Hazard warning switch
01122	Handbrake switch	03312	A.C. blower switch
01128	Lighting switch	03601	Panel light rheostat
01130	Carburetor fan motor thermostatic switch	03701	Turn signal indicator switch
01134	A.C. condenser fan thermoswitch	03702	High/low beams changeover switch
01135	A.C. high pressure switch	03703	Wiper/washer changeover switch
01149	Thermoswitch for gulp valve by-pass	03800	Windshield intermittent switch
01200	Ignition coil	03900	Windshield washer pump
01300	Battery	04200	Fuel gauge sending unit
01400	Radiator fan motor	04303	Turn signal/hazard flasher
01401	Heater fan motor	04400	Fuse box
01402	A.C. blower	04501	In-line fuse
01403	A.C. condenser fan	04513	Instrument cluster lights resistors
01505	Windshield wiper motor	04600	Cigarette lighter
01506	Concealed headlight motor	04800	A.C. blower resistor
01508	Carburetor fan motor	04803	Resistor for electronic ignition
01716	Right high/low beam concealed headlight	05001	Brake fluid level indicator
01717	Left high/low beam concealed headlight	05005	Fasten seat belt and remove key buzzer
01908	Left license plat light	05100	Idle stop solenoid
01909	Right license plate light	05301	Fast idle electrovalve
01914	Left front turn signal and parking light	05306	Electrovalve for gulp valve by-pass
01915	Right front turn signal and parking light	05500	Radio speaker — right side
01920	Left front side marker light	05501	Radio speaker — left side
01921	Right front side marker light	05800	Rear window defogger
01922	Left rear side marker light	05901	Right horn
01923	Right rear side marker light	05902	Left horn
01924	Left tail turn signal, back-up and stop light unit	06000	Frost preventing valve
01925	Right tail, turn signal, back-up and stop light unit	06203	Electronic ignition assembly
02121	Control panel light	06302	Seat belt indicator delay switch
02123	Center courtesy light	06400	A.C. pressure switch