

Speedometer Drive

212.33

Page 21-29/30

REMOVAL AND INSTALLATION

Unscrew speedometer cable (2) from speedometer drive assembly (3).

Remove locking bolt (1) holding speedometer drive in transmission housing. Withdraw speedometer drive assembly.

Installation is reverse of removal.

1. Locking bolt 2. Speedometer cable 3. Speedometer drive assembly

